

## Programming Transmitter Code – Digitech

To program remote into receiver, use a piece of wire or large paper clip with 3/16” bent at 90o.

Remove cover on grey control box. Locate black radio on right hand side of green control board, then using wire, press programming button through a hole on right hand side of receiver (below white mark) for 1 sec.

Red programming light will flash, then, press any remote button. The LED will pause on to indicate valid learning.

To delete all remotes, press programming button as above, and hold for 5 seconds, the LED will go on solid for 3 seconds to indicate erase complete.

### Programming additional Wireless Visitor Buttons

Same as above except press the visitor button instead of buttons one to four on transmitter.

